

## D3 Appearance Setup Procedures

### Appearance Default Display (Display will show SetPoint and Position as Default)

1. Enable FULL MENU.
2. Navigate to **SETUP > Appearance > Def. Display.**
3. Hit the right key (FUNC) one time to select that option.
4. Scroll down to 'set&pos'.
5. Hit **OK**. Display will now show SetPoint and Position.

### Display Orientation (Display can be flipped if the unit is upside down)

1. Navigate to **SETUP > Appearance > Orient.**
2. Right key (FUNC) in and select 'Flipped'.
3. Hit **OK**. LCD display will now be inverted, as well as the push buttons.
4. To revert back to the normal orientation, simply follow step 1 and 2 but select 'Normal' instead of 'Flipped'.

### Change the Units Being Displayed (SetPoint can be shown in mA, while Position is shown in %)

1. Navigate to **SETUP > Appearance > Units > SetPoint.**
2. Right key (FUNC) in and select 'mA'. Hit **OK**.
3. When Display is set to show SetPoint and Position (as mentioned above), then the SetPoint will show in mA while Position is shown in %.

For further assistance, please contact us by phone, fax or by email at [pmvsales@flowserve.com](mailto:pmvsales@flowserve.com).

Additional product information can be found on our website at <http://www.pmv.nu/start.aspx>.

**PMV**

14219 Westfair West Dr.

Houston, TX 77041

Tel: 281-671-9209

Fax: 281-671-9268

[www.pmv.nu](http://www.pmv.nu)