


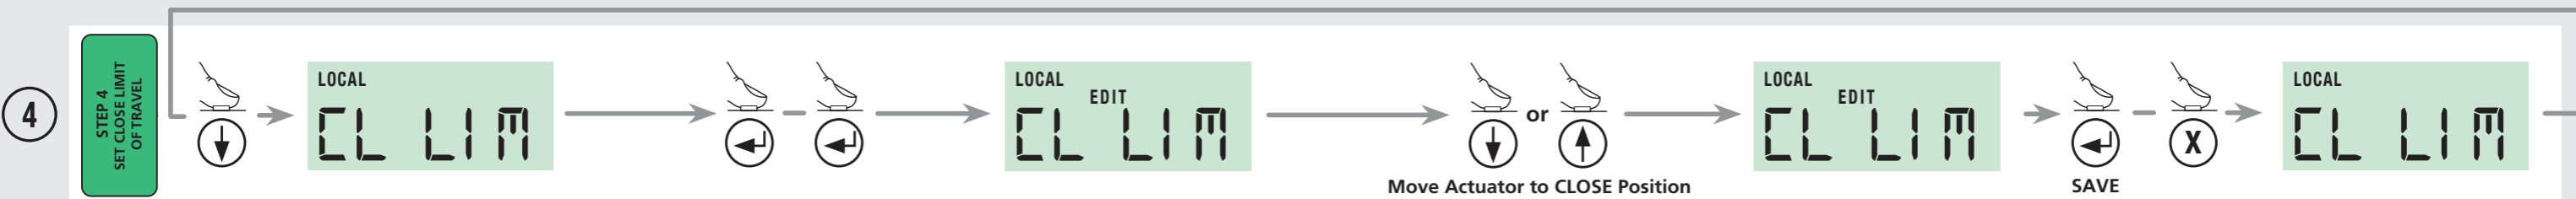
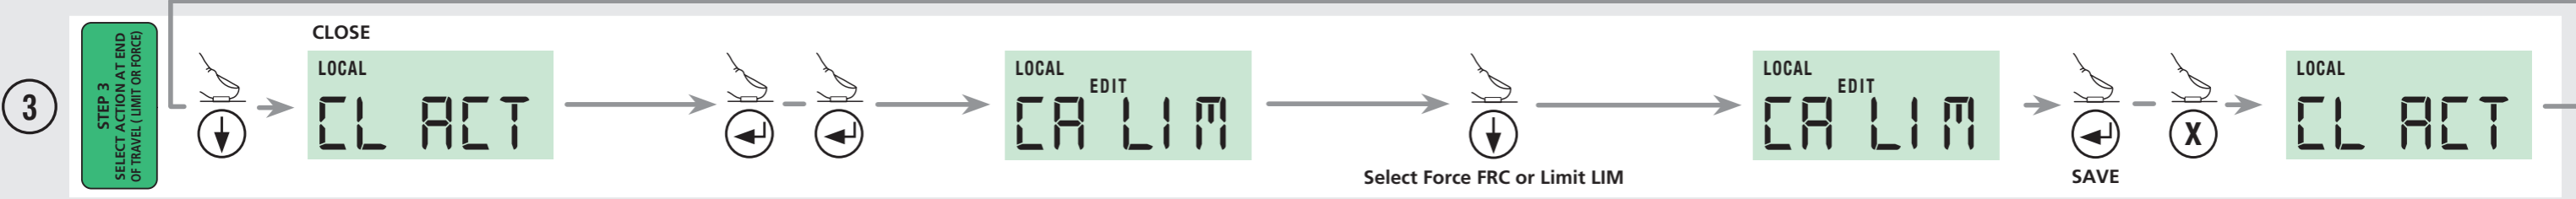


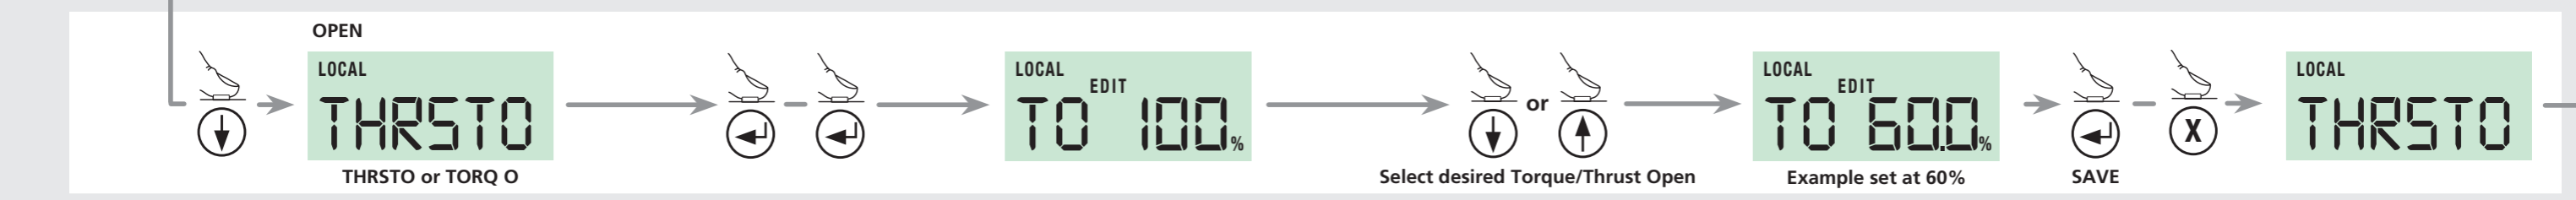

CMA Range Quick Start Guide

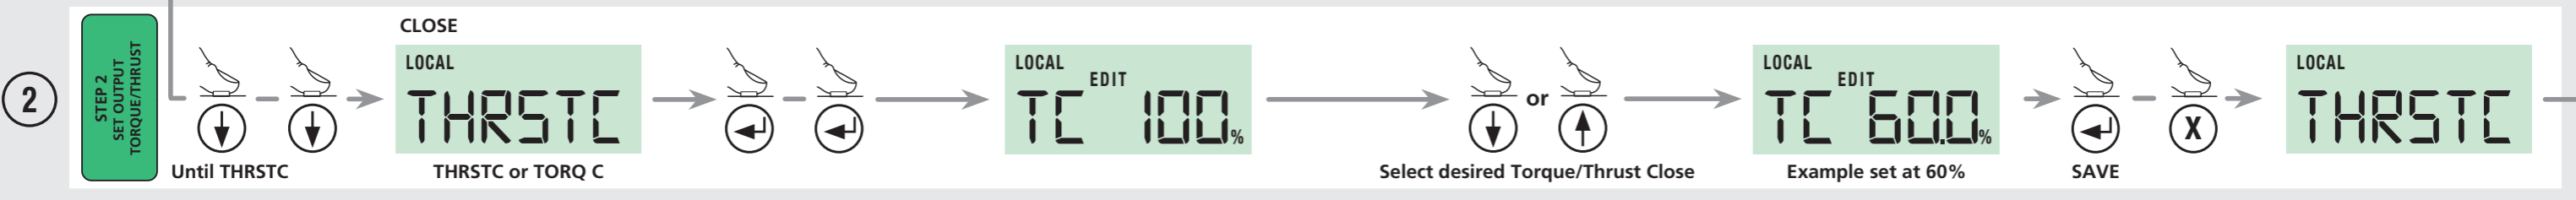

These instructions enable the actuator to be configured to suit the valve and must be carried out before electrical start up. For complete instructions see PUB094-003 RPC CMA Installation Manual

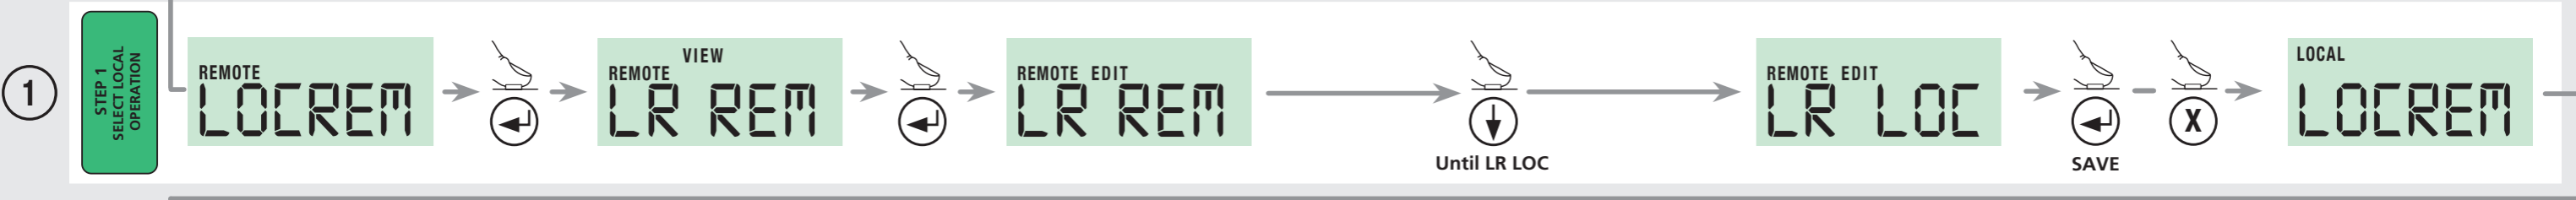


Rotork plc
Brassmill Lane, Bath, UK
tel +44 (0)1225 733200
fax +44 (0)1225 333467
email mail@rotork.com

USA
Rotork Process Controls
tel +1 (414) 461 9200
fax +1 (414) 461 1024
email rpcinfo@rotork.com

A full listing of our worldwide sales and service network is available on our website.

CMA Range Quick Start Guide

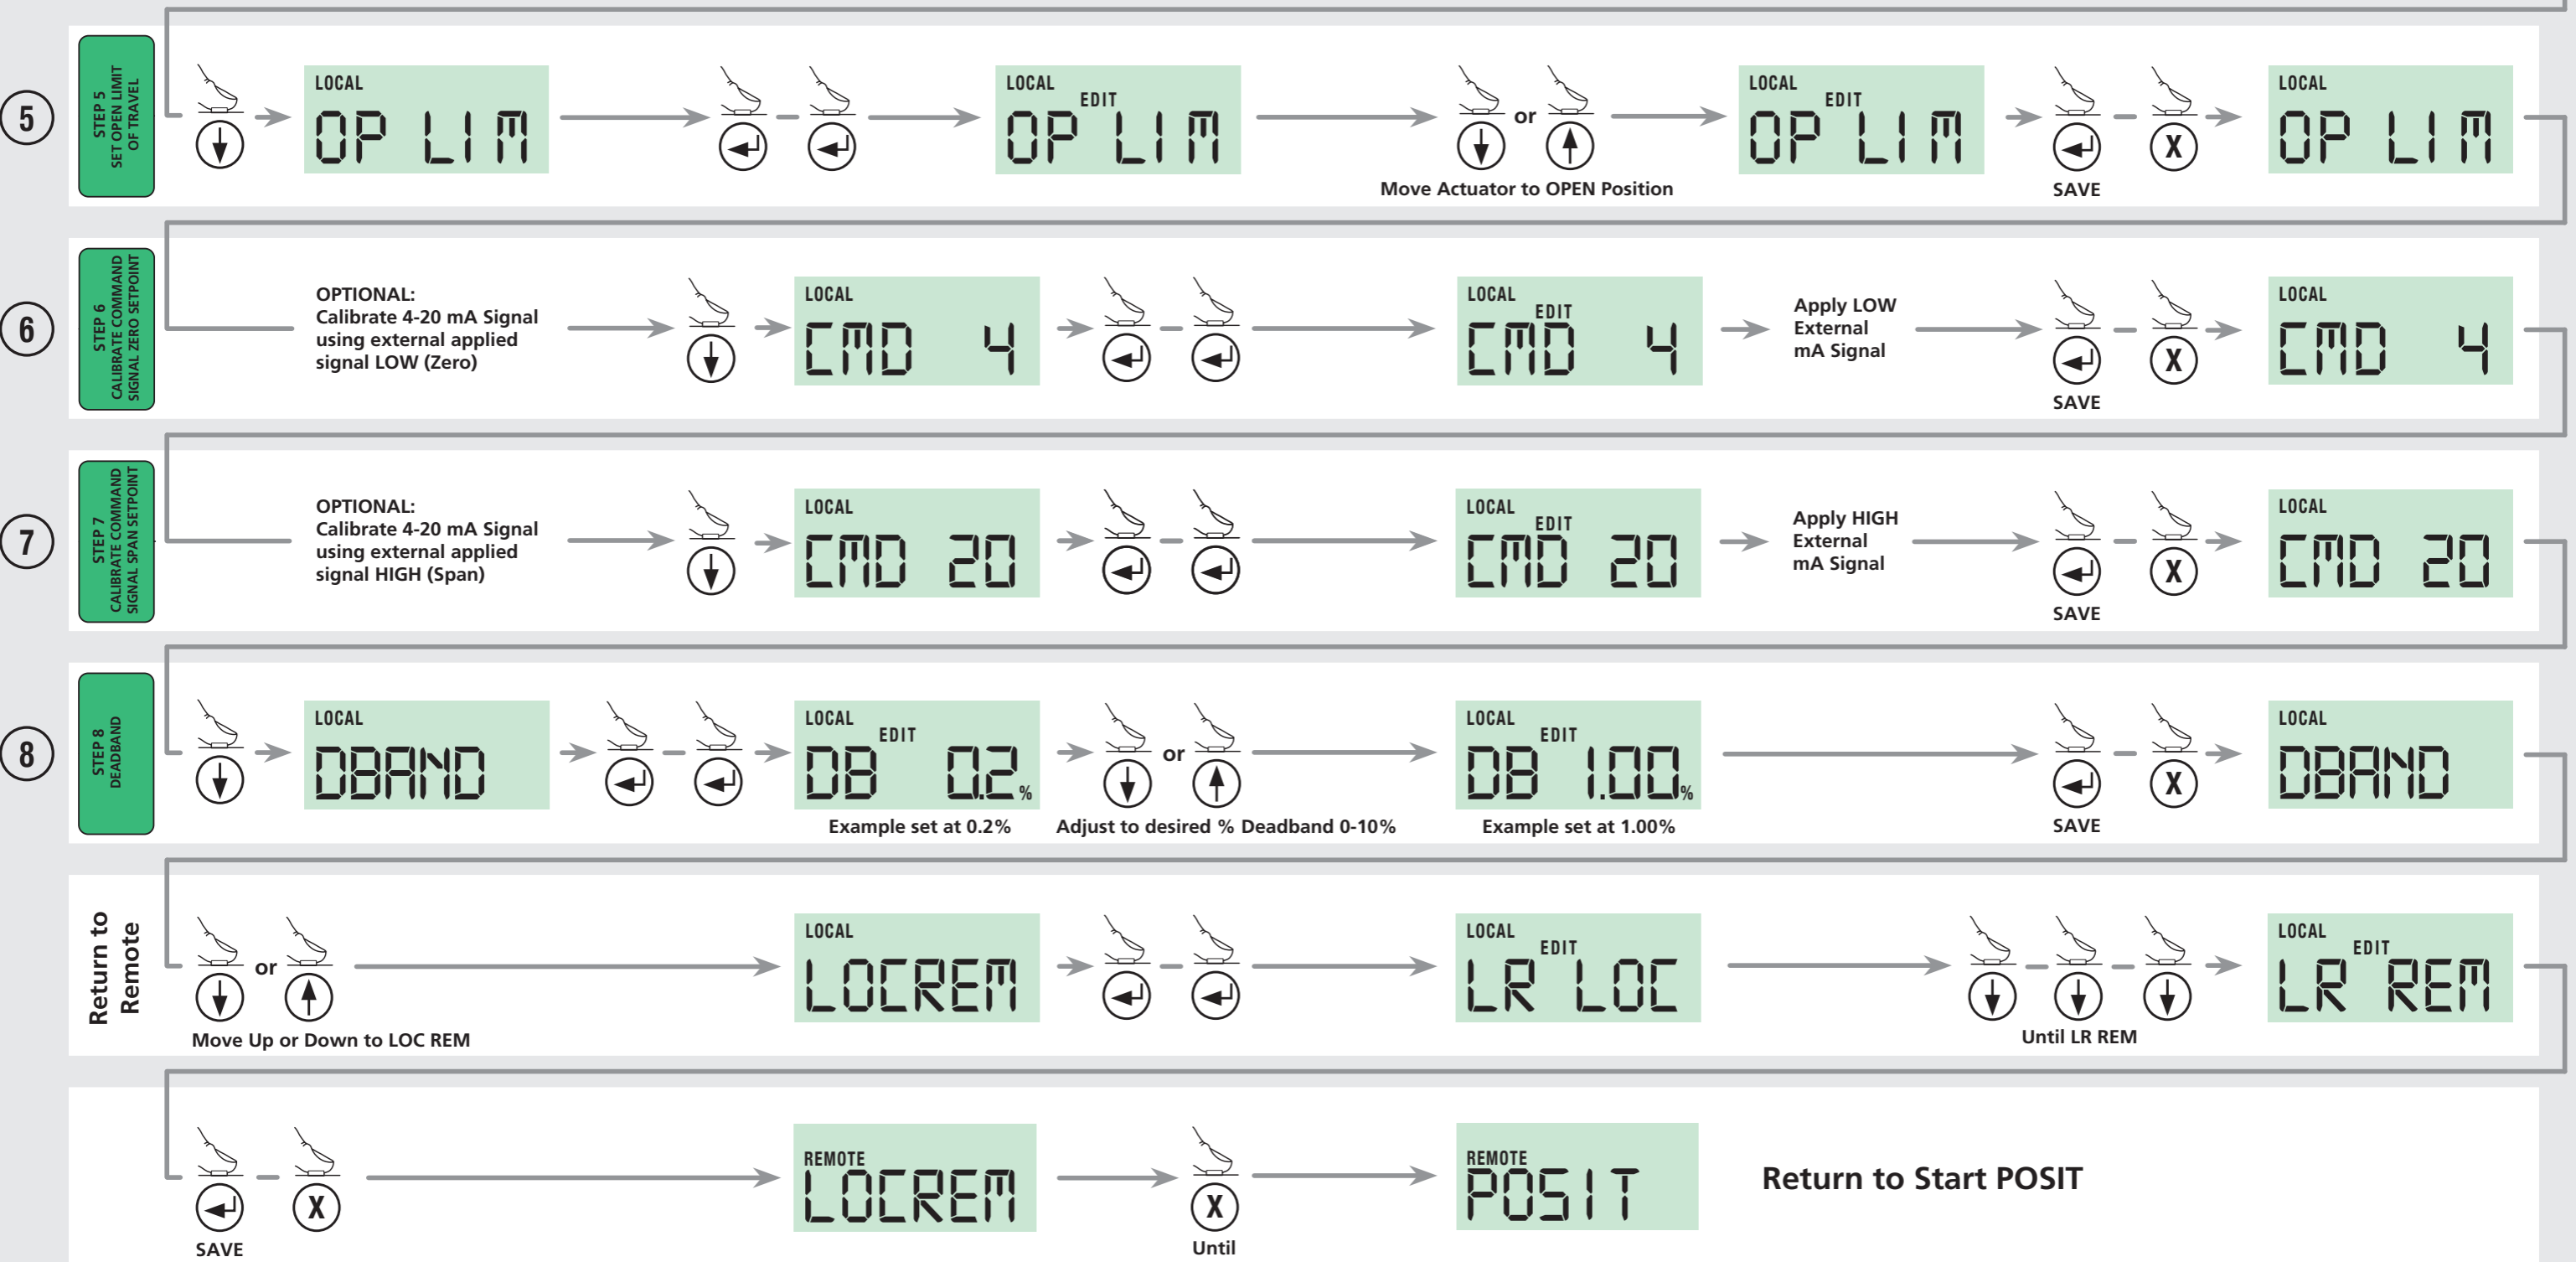

These instructions enable the actuator to be configured to suit the valve and must be carried out before electrical start up. For complete instructions see PUB094-003 RPC CMA Installation Manual

rotork[®]

Rotork plc
Brassmill Lane, Bath, UK
tel +44 (0)1225 733200
fax +44 (0)1225 333467
email mail@rotork.com

USA
Rotork Process Controls
tel +1 (414) 461 9200
fax +1 (414) 461 1024
email rpcinfo@rotork.com

A full listing of our worldwide sales and service network is available on our website.